

INSTALLING THE 2 PIECE LOCK COLLARS


Below is a picture of the 2 piece lock collar



1. Disassemble the lock collars by unscrewing the 2 Allen head bolts with a 3/16" Allen wrench.



2. Place one collar directly against the driver side bearing and the other directly against the drive hub.

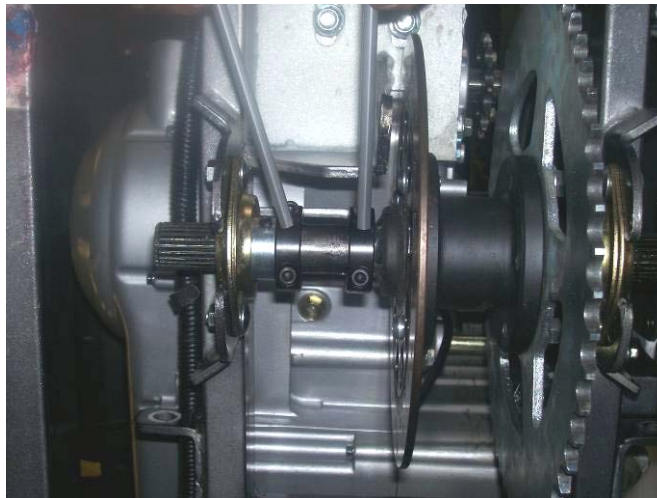

3. Lock the collars into place by tightening the Allen head bolts with a 3/16" Allen wrench.