AGA-7Assembly Instruction

1. Open the packing to take out the battery, accessory case, wheels, racks etc..



Bolt:M6X202pcNut:M62pcSpring wash: ϕ 6.52pcFlat wash: ϕ 6.52pc

Battery bracket: 1pc
Bolt: M6X20 2pc
Nut: M6 2pc
Rubber Strip: 1pc

Bolt: M10X115 1pc Bolt: M10X25 2pc Nut: M10 3pc





hardware



Bolt: M6X20 2pc
Nut: M6 2pc
Spring wash: ϕ 6.5 2pc
Flat wash: ϕ 6.5 2pc
Bolt: M8X15 4pc





Nut:M88pcSpring wash:Φ88pcFlat wash:Φ88pc



Bolt: M10X20 8pc




Handlebar clamp: 2 set


Bolt: M8X60 4pc
Nut: M8 4pc




Bolt: M10X45 3pc Nut: M10 3pc 2. Lift the vehicle out and place it on a stable and reliable platform, and assemble the front and rear shocks

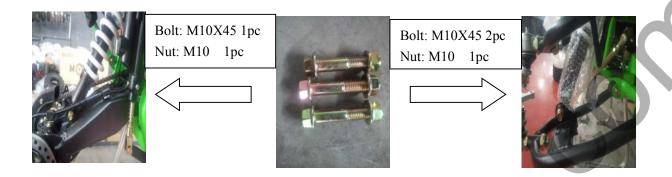


- 3. Take out the wheels and inflate the tires.
- a. Rear wheel assembly: Assemble the rear wheel to the rear rim bracket with M10X20 bolts. And then, put on the dust cap.

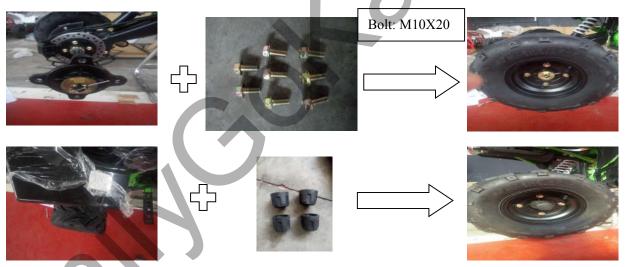



b. Front wheel assembly: After the steering linkage and brake drum assembled, fix the front wheels with M8 spring wash, flat wash and nut.

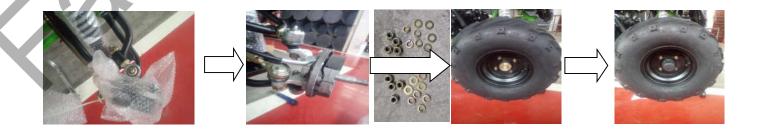

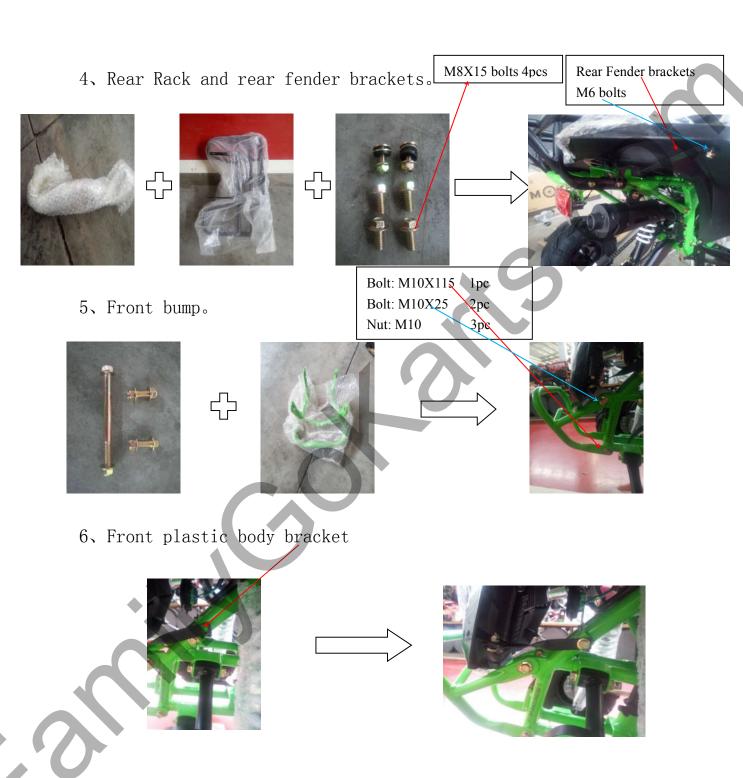


7、Foot Guard。

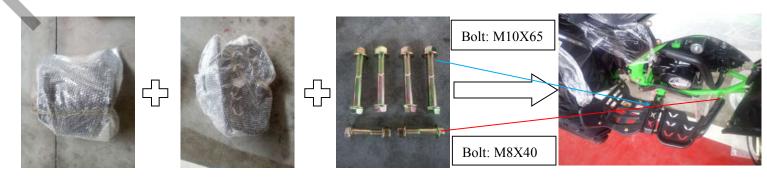

 





10. Fuel cap to Fuel tank

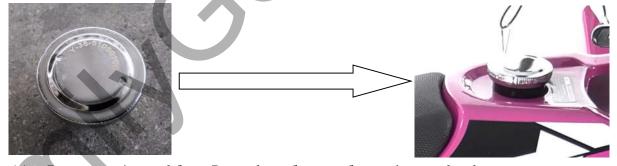

11. Battery Assembly: Put the electrolyte into the battery as the instruction of the battery manual. The black cable must be connected to + pole and the red cable to - pole.

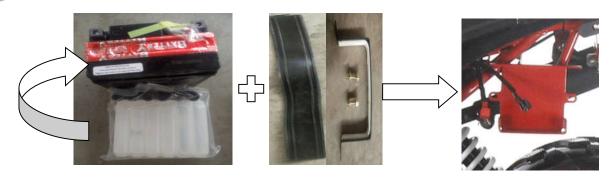

12. Check the engine vent tube. If the tube is tied, must cut the zip tie tightened the engine vent tube \circ

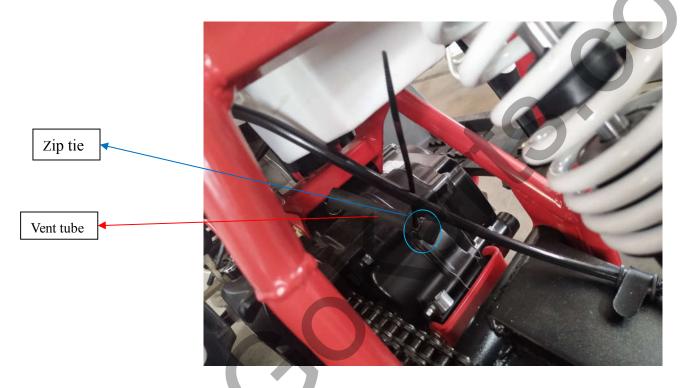

13. Assembly finished.

