


INSTALL FRONT WHEEL (ONE)

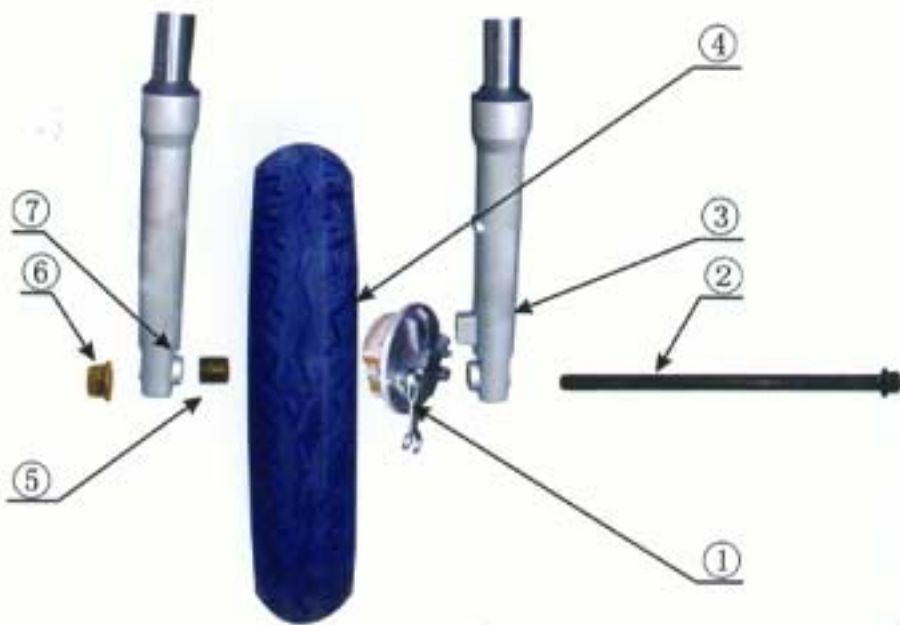

Description	Quantity	Specification	Remark
① Drum break pump	1		Install in front wheel
② FR Wheel Axle	1	M10×198	On motorcycle
③ left shock absorber	1		On motorcycle
④ Fr Wheel	1		On Motorcycle
⑤ FR Wheel Bush	1		Through front wheel axle
⑥ Nut M14	1	M14×1.25	Fix in front Axle Wheel
⑦ Right shock absorber	1		On motorcycle


INSTALL STEP:

1. Take out 2, 5 and 6 from the iron frame packing
2. Put 1 into 4, and then put 3 into 4.
3. Cross 3, 1, 4 by 2.
4. Then put 5 into the middle of 7 and 4 last.
5. Cross 2 to 5 and 7 and fasten by 6

ATTENTION:

1. 6 should be fixed by 13.5bl
2. Running the front wheel clockwise to check whether it can be moved freely after installation.

INSTALL HANDLEBAR (TWO)

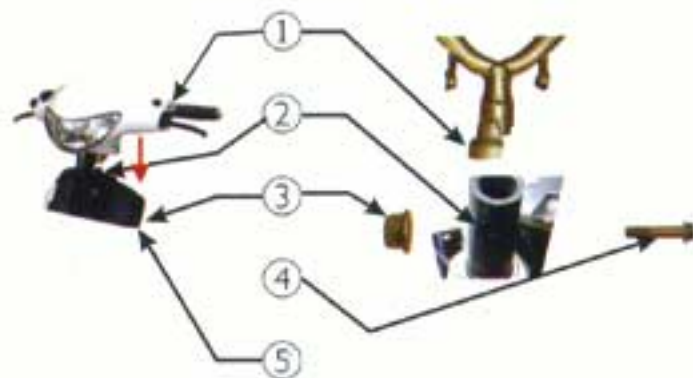


Description	Quantity	Specification	Place	Torque
① Steering handle	1		On motorcycle	
② Steering pole	1		On motorcycle	
③ Nut M14	1	M14×1.25	On motorcycle	20blf
④ Bolt M10*55	1		On motorcycle	
⑤ The way of assembly	1		On motorcycle	

INSTALL STEP:

1. Take out 3 and 4 from steering handle
2. Refer 5 drawing then put 1 into 2
3. Connect 1, 2 by 4, and fasten by 3

ATTENTION:

1. Connect 1, 2 by 4, 4 through 2
2. After installation, lift up the steering handle, check and sure without any gap.
3. Pay attention to steering pole, handle, and guide track, There are slots, insert correctly.

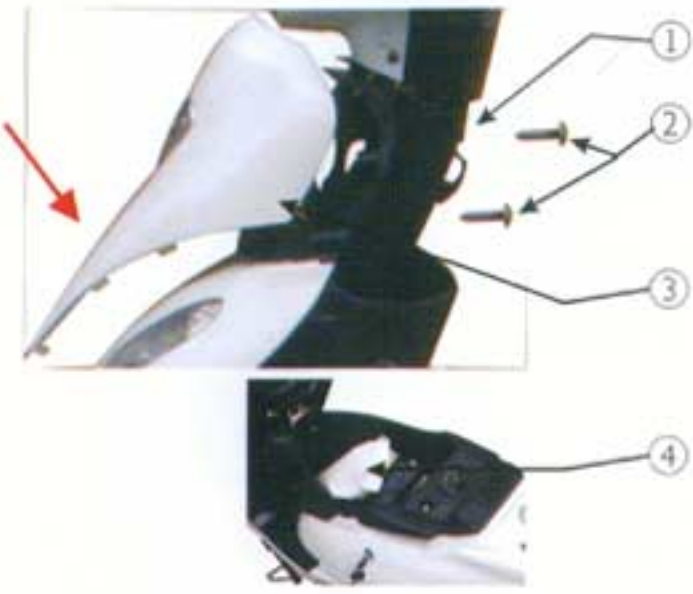

INSTALL FRONT COVER (THREE)

Description	Quantity	Specification	Remark
① Body	1		On motorcycle
② Self-tapped screw	2		In sundries box
③ Front cover	1		On motorcycle
③ Sundries box	1		

INSTALL STEP:

1. Refer drawing, Put 3 on 1
2. Fasten 1, 3 by 2.

ATTENTION:

1. Put 3 on 1, the hock of 3 should be put into slot of 1




INSTALL REARVIEW MIRROR (FOUR)

Description	Quantity	Specification	Remark
⑤ Rearview mirror	2		In sundries box
⑥ Front of motorcycle	1		On motorcycle

INSTALL STEP:

1. Fix 5 on 6, by 5's nut.

INSTALL BATTERY (FIVE)

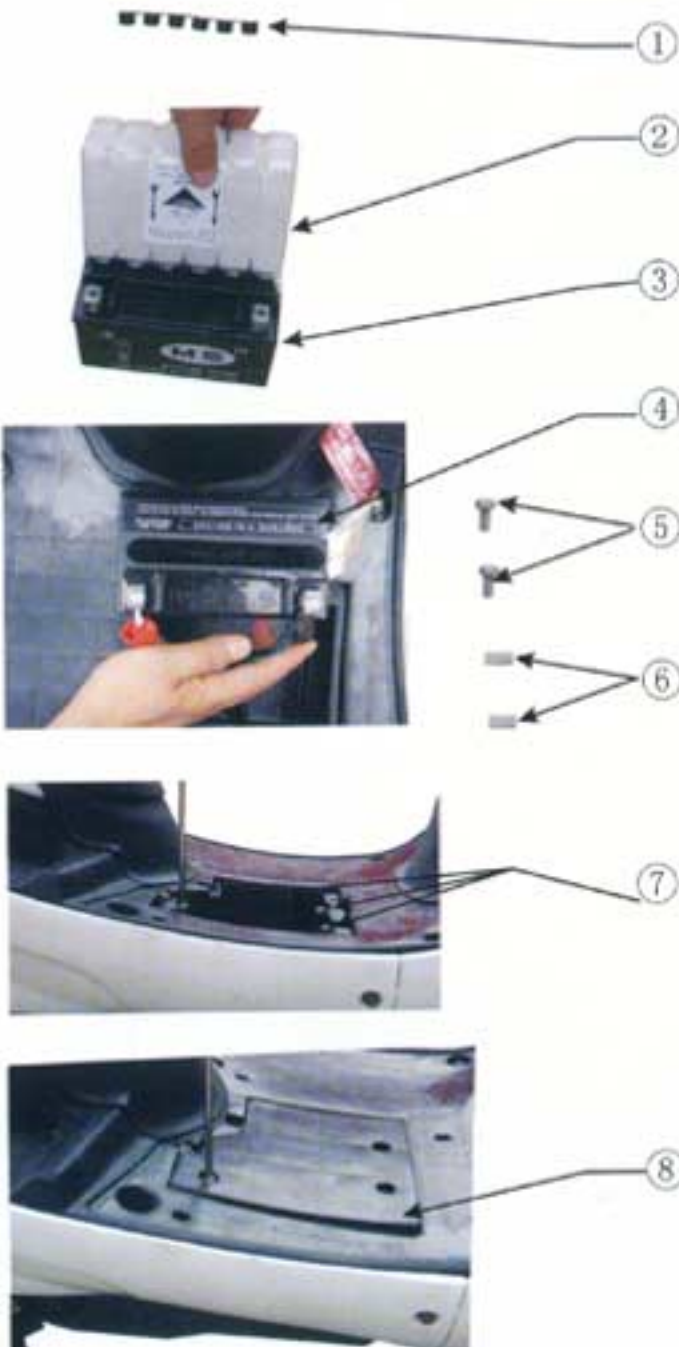

Description	Quantity	Specification	Remark
① Battery sealed strip	1		In sundries box
② Electrolyte	1		In sundries box
③ Battery	1	M10×198	In sundries box
④ Battery line	1		In sundries box
⑤ Battery Bolt	2		In sundries box
⑥ Battery Nut	2		In sundries box
⑦ Battery Cover Screw	3		On Motorcycle
⑧ Battery Cover	1		In sundries box

INSTALL STEP:

1. Inject 2 into 3, refer the instruction of battery then cover 1.
2. Put 3 into battery box, connect electrode 4 by 5 and 6 fasten them
3. Take down 7 from vehicle, cover 8 and tighen by 7

ATTENTION:

1. When you connect the electrode 4, make sure red line connect "+" anode and green line connect "-" cathode
2. After installing battery, and inject electrolyte, then leave it for several minutes, then charge it